




IMPRESSA C9 – Quick Reference Guide

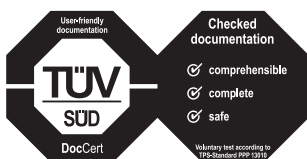

The 'IMPRESSA Manual' together with these short instructions 'IMPRESSA C9 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.




These short instructions do not replace the 'IMPRESSA C9 Manual'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Switching on



Precondition: Your IMPRESSA is switched on at the power switch and the indicator light is illuminated (standby).







- ▶ Press the On/Off button to switch the IMPRESSA on.
HEATING is displayed.
PRESS RINSE, the maintenance button  lights up.
- ▶ Place a receptacle under the coffee spout.
- ▶ Press the maintenance button.
RINSING, the machine rinses.
Preparation stops automatically. **READY** appears on the display.

Using and activating filter

Your IMPRESSA no longer has to be descaled if you are using CLARIS filter cartridges.

- i** Perform the 'Insert filter' operation without interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **READY** is displayed.

- ▶ Open the cover of the Rotary Switch.
-  ▶ Keep the Rotary Switch pressed **until RINSE** appears on the display.
-  ▶ Turn the Rotary Switch until **FILTER --** is displayed.
-  ▶ Press the Rotary Switch to enter the programme item.
NO -
-  ▶ Turn the Rotary Switch until **YES ✓** is displayed.
-  ▶ Press the Rotary Switch to confirm the setting.
OK appears briefly on the display to confirm the setting.
INSERT, the maintenance button  lights up.
- ▶ Close the cover of the Rotary Switch.
- ▶ Remove the CLARIS filter cartridge from the Welcome Pack.
- ▶ Remove the water tank and empty it.



- ▶ Lift the cartridge holder and insert the filter cartridge into the water tank, applying slight pressure.
- ▶ Close the cartridge holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert.

- ▶ Place a receptacle (at least 500 ml) under the frother.
- ☼ ▶ Press the maintenance button.
FILTER RINSING. Water will flow out of the frother.

- i** You can interrupt rinsing of the filter at any time by pressing any button.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Filter rinsing stops automatically after approx. 500 ml. **HEATING** appears on the display, then **READY** is displayed. The filter is now activated.

Filter change

- i** After 50 litres of water have flowed through, or after two months, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** If the CLARIS filter cartridge is not activated, you will not be prompted to change the filter.

To change the CLARIS filter cartridge when prompted to do so by your IMPRESSA, proceed as follows:


Precondition: **READY / FILTER** is displayed and the maintenance button ☼ lights up.

- ☼ ▶ Press the maintenance button.
CHANGE
- ▶ Remove the water tank and empty it.
- ▶ Open up the cartridge holder and remove the old CLARIS filter cartridge.



- ▶ Insert a new CLARIS filter cartridge into the water tank, pressing it slightly.
- ▶ Close the cartridge holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert.

- ▶ Place a receptacle (at least 500 ml) under the frother.

i If you are using the Professional Cappuccino Frother, set the selection lever of the frother to the steam position .

- ❖ ▶ Press the maintenance button.

FILTER RINSING – Water will flow out of the frother.

i You can interrupt filter rinsing at any time. To do this, press any button.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Filter rinsing stops automatically after approx. 500 ml. The IMPRESSA heats up and is once again ready to use.

Clean machine

After 200 coffee preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.
-

i The cleaning programme only lasts about 20 minutes.

i Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.

i JURA cleaning tablets are available from stockists.

Precondition: **READY / CLEAN** is displayed and the maintenance button  lights up.

-  ▶ Press the maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS RINSE, the maintenance button  lights up.


- ▶ Place a receptacle under the coffee spout and the frother.

-  ▶ Press the maintenance button.

CLEANING, water flows from both coffee spouts.

The process is interrupted, **ADD TABLET**.

- ▶ Open the cover of the filler funnel for pre-ground coffee.

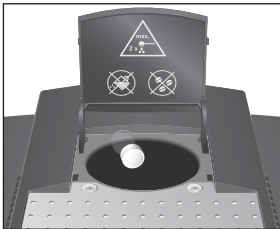

- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel.

-  ▶ Press the maintenance button.

CLEANING, water flows from both coffee spouts several times.

The process is interrupted – **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

The cleaning operation is now complete. The IMPRESSA is ready for use again.

Descal machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the degree of hardness of your water.



If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse the descaling agent off with clean water. Should you get any descaling agent in your eye, see a doctor.



If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

CAUTION

If the descaling agent comes into contact with sensitive surfaces, damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approx. 45 minutes.
- i** JURA descaling tablets are available from stockists.
- i** If you use a CLARIS filter cartridge and this is activated, you will not be prompted to change the filter.

Precondition: **READY / DE-SCALE** is displayed and the maintenance button  lights up.

-  ▶ Press the maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

AGENT IN TANK

- ▶ Remove the water tank and empty it.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a container that holds 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it in the machine.

AGENT IN TANK, the maintenance button  lights up.

- ▶ Remove the frother.
- ▶ Place a receptacle (at least 500 ml) under the Connector System[®].


-  ▶ Press the maintenance button.

DE-SCALING

This causes water to flow out of the Connector System[®] several times. The maintenance button blinks during the descaling operation.

The operation stops automatically, **EMPTY TRAY**.

- ▶ Empty the receptacle under the Connector System[®].

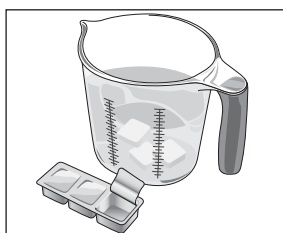

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

FILL WATER TANK

- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold mains water and reinsert.

PRESS RINSE, the maintenance button ☸ lights up.

- ▶ Replace the frother.

- ▶ Place a receptacle under the frother.

- ☸ ▶ Press the maintenance button.

DE-SCALING, water flows out of the frother.

The operation stops automatically, **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

The descaling operation is now complete. Your IMPRESSA heats up and is once again ready to use.



- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Rinsing the Easy Cappuccino Frother

To ensure that the Easy Cappuccino Frother works perfectly, you should rinse it with water whenever you have prepared some milk.

Your IMPRESSA will prompt you to rinse the Easy Cappuccino Frother 10 minutes after you have prepared milk.

Precondition: **CAPPUCCINO RINSE** is displayed and the maintenance button ☸ lights up.

- ▶ Place a receptacle under the Easy Cappuccino Frother.

- ☸ ▶ Press the maintenance button.

CAPPUCCINO RINSING, the frother is rinsed.

Preparation stops automatically. **READY** appears on the display.



Cleaning the Easy Cappuccino Frother

CAUTION






To ensure that the Easy Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.


- i** The JURA Cappuccino Cleaner is available from stockists.
- i** The IMPRESSA will not prompt you to clean the frother.

Precondition: **READY** is displayed.

- ▶ Remove the milk pipe from the milk carton/bottle or the milk container.
- ▶ Open the cover of the Rotary Switch.
-  ▶ Keep the Rotary Switch pressed **until RINSE** appears.
-  ▶ Press the Rotary Switch to enter the programme item.
C CLEANING
-  ▶ Press the Rotary Switch.
CAPPUCCINO CLEANER
- ▶ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Place another receptacle under the frother.
-  ▶ Press the maintenance button.
CLEANING, the frother and pipe are cleaned. The operation stops automatically.
WATER FOR CAPPUCCINO
- ▶ Rinse the receptacle thoroughly, fill it with approx. 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the frother once more.
-  ▶ Press the maintenance button.
CLEANING, the frother and pipe are rinsed with fresh water. The operation stops automatically.
READY appears on the display.
- ▶ Close the cover of the Rotary Switch.



Disassembling and rinsing the Easy Cappuccino Frother

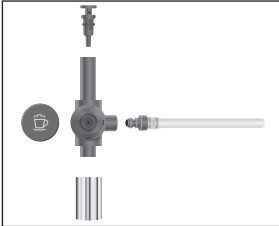

- ▶ Carefully remove the frother from the Connector System[®] by twisting slightly.
- ▶ Dismantle the frother completely.
- ▶ Rinse all the frother parts thoroughly under running water.
- ▶ Reassemble the frother.

i Ensure that the individual parts are correctly and firmly attached to one another to ensure optimum function of the frother.

- ▶ Firmly attach the frother to the Connector System[®].

Rinsing the Professional Cappuccino Frother

To ensure that the Professional Cappuccino Frother works perfectly, you should rinse it with water whenever you have prepared some milk.

Your IMPRESSA will prompt you to rinse the Professional Cappuccino Frother 10 minutes after you have prepared milk.

Precondition: **CAPPUCCINO RINSE** is displayed and the maintenance button  lights up.

- ▶ Place a receptacle under the Professional Cappuccino Frother.

-  ▶ Press the maintenance button.

CAPPUCCINO RINSING, the frother is rinsed.

Preparation stops automatically. **READY** appears on the display.



Cleaning the Professional Cappuccino Frother

CAUTION








To ensure that the Professional Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.


- i** The JURA Cappuccino Cleaner is available from stockists.
- i** The IMPRESSA will not prompt you to clean the frother.

Precondition: **READY** is displayed.

- ▶ Open the cover of the Rotary Switch.
-  ▶ Keep the Rotary Switch pressed **until RINSE** appears.
-  ▶ Press the Rotary Switch to enter the programme item.
CLEANING
-  ▶ Press the Rotary Switch.
CAPPUCCINO CLEANER
- ▶ Remove the milk pipe from the milk carton/bottle or the milk container.
- ▶ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Turn the selection lever of the frother to the milk foam position  or milk .
- ▶ Place another receptacle under the frother.
-  ▶ Press the maintenance button.
CLEANING, the frother and pipe are cleaned. The operation stops automatically.
WATER FOR CAPPUCCINO
- ▶ Rinse the receptacle thoroughly, fill it with approx. 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the frother once more.
-  ▶ Press the maintenance button.
CLEANING, the frother and pipe are rinsed with fresh water.
Preparation stops automatically. **READY** appears on the display.
- ▶ Close the cover of the Rotary Switch.



Disassembling and rinsing the Professional Cappuccino Frother

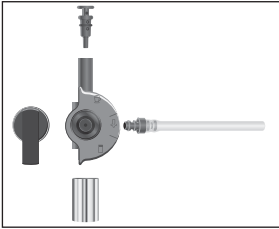

- ▶ Carefully remove the frother from the Connector System[®] by twisting slightly.
- ▶ Dismantle the frother completely.
- ▶ Rinse all the frother parts thoroughly under running water.
- ▶ Reassemble the frother.

i Ensure that the individual parts are correctly and firmly attached to one another to ensure optimum function of the frother.

- ▶ Firmly attach the frother to the Connector System[®].